

# Assembly Instruction Sheet #IS-1711P50-5


## For Style 1711P50-5

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.  
**Light Source:** 120V LED \*50W DIMMABLE (2700 to 5000) .  
**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

### ⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

### Package Contents

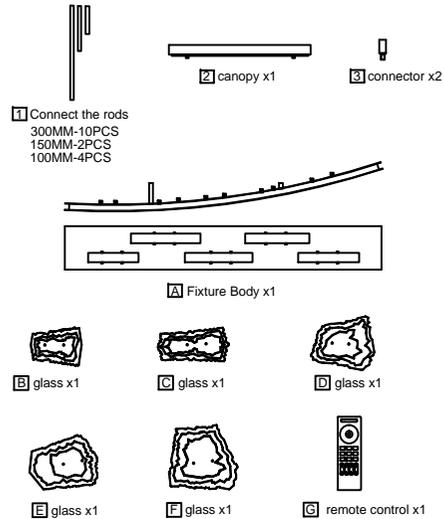

### Hardware Contents

PART	DESCRIPTION	QUANTITY
BB	Wire nut	2pcs
DD	Screw	2pcs



### STEP 1 - Install Ceiling Canopy to Ceiling .

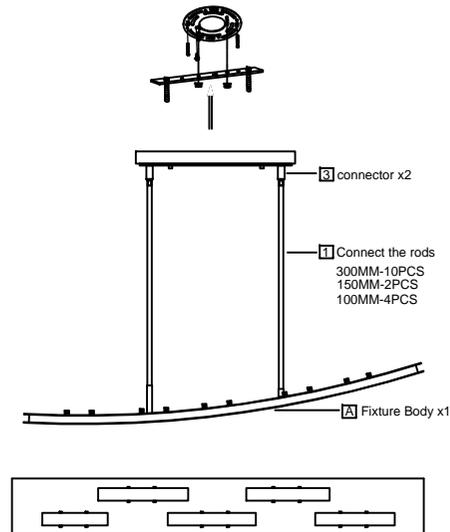


Figure 1

### STEP 2 - Attach Crossbar to Outlet Box.

A. Pass the supply wires through the Mounting bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box (CC) with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (DD) (not included). Tighten until snug.

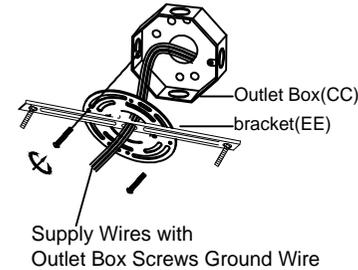


Figure 2

### STEP 3 - Wire Connections

A. Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

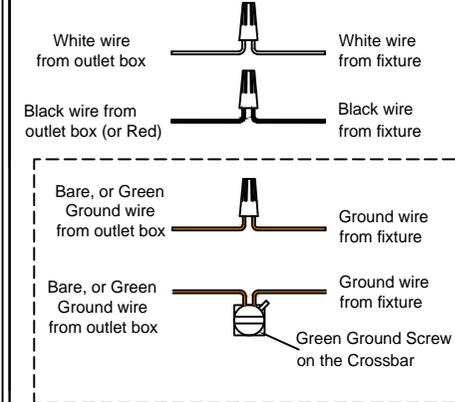


Figure 3

STEP 4 - Because the lamp body is relatively heavy, please pay attention to the bearing screws when installing the hanging plate.

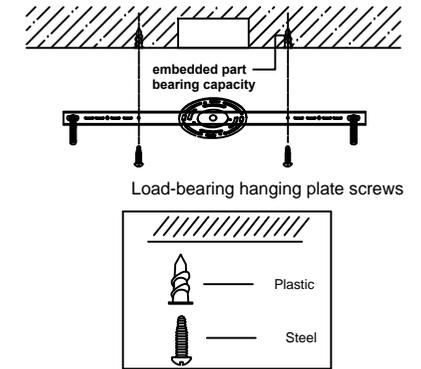


Figure 4

STEP 5 - Finally put the glass in the hardware and screw it in. The remote control can be used to adjust the color temperature of the light source. (2700 to 5000).

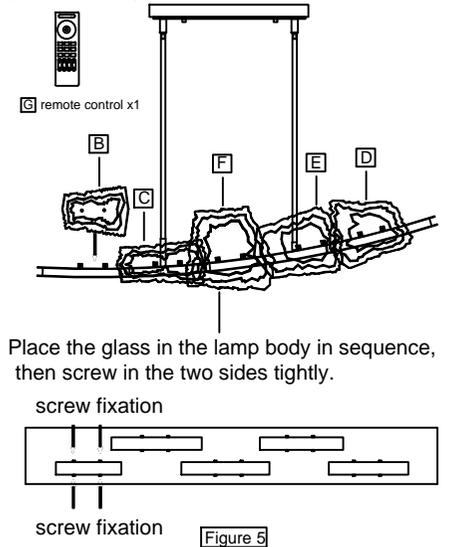


Figure 5